



INSTALLATION

Single Face SL Installation

CAUTION: Ensure all mounting fasteners are secured properly to a load bearing structure, i.e. wall stud, electrical box, or hanger assembly.

Flush to Wall, single face mounting

1. Carefully unpack from box.
2. Loosen Allen screws in bracket on rear of sign.
3. Slide wall bracket off sign.
4. Fasten wall bracket to wall with appropriate fasteners.
5. Slide sign into rear mounted wall bracket and tighten set screws into notches on wall bracket.

End or Ceiling Mount (Requires Accessory Mounting Plate SLM05)

1. Fasten accessory bracket (SLM05) to wall or ceiling with appropriate fasteners.
2. Carefully unpack sign from box.
3. Slide rear mounted wall bracket off sign.
4. Fasten wall bracket to End or Ceiling Mount bracket (SLM05) using rivets packed with mounting bracket.
5. Slide sign into rear mounted wall bracket and tighten set screws into notches on wall bracket.



CEILING
MOUNT



END
MOUNT

Removal of Arrows

1. With thumb on the flat side of the arrow, press in on arrow until arrow is loose.
2. With thin instrument (screwdriver or knife), being careful not to scratch or break the diffuser, gently pry on the arrow to dislodge and remove.

Double Face SL Installation

NOTE: The Double-Faced SL can be mounted directly to the ceiling or wall, or by using the SLM10 (ordered separately) canopy mounting accessory.

For Direct Mounting to Ceiling


1. Loosen Allen screws from end of frame and slide off frame end.
2. Remote EXIT packages.
3. Reposition the hole plugs (installed on top) from the top to the side holes.
4. Direct mount the 3 sided frame to the ceiling by use of appropriate fasteners (not included) using the 2 holes provided in the top frame section.
5. Re-install EXIT packages.
6. Re-install frame end with 2 allen screws.

For Direct End Mounting to Wall

1. Remove allen screws from end of frame and slide off frame end.
2. Remote EXIT packages.
3. Direct mount the 3 sided frame to the wall by use of appropriate fasteners (not included) using the 2 holes provided in the side frame section.
4. Re-install EXIT packages.
5. Re-install frame end with 2 allen screws.

For SLM10 (Ordered Separately) Canopy Mounting To Wall or Ceiling

1. Remove allen screws from end of frame and slide off frame end.
2. Remote EXIT packages.
3. Reposition the hole plugs (installed on top) from the top to the desired location.
4. Mount the canopy to the frame using hardware included (2 screws, 2 nuts, and 1 washer) in the desired location (top or end).
5. Mount the canopy and the frame to wall or ceiling using appropriate fasteners (not included).
6. Re-install EXIT packages.
7. Re-install frame end with 2 allen screws.

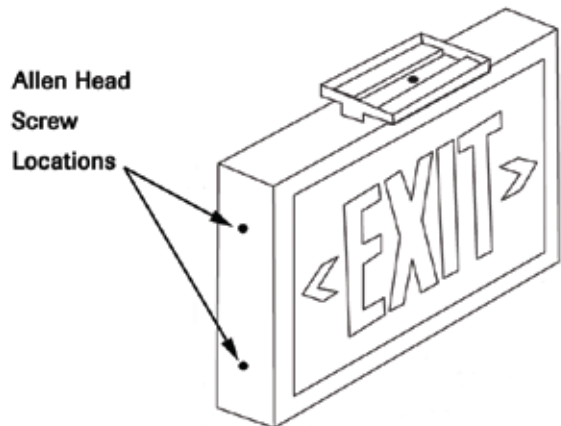

For SLPA-D Pendant Mount Accessory Installation

1. Remove allen screws from end of frame and slide off frame end.
2. Remove EXIT packages.
3. Reposition the hole plugs (installed on top) to the side.
4. Mount the pendant mount rod to the frame by threading nuts on each side of the mounting hole.
5. Install pendant and cover onto the threaded rod and secure with round nut.
6. Mount the metal bracket to the ceiling using appropriate fasteners (not included).
7. Re-install EXIT packages.
8. Re-install frame end with 2 allen screws.



Hubbell Lighting, Inc. Life Safety Products • www.dual-lite.com

Copyright® Hubbell Lighting, Inc., All Rights Reserved • Specifications subject to change without notice. • Printed in U.S.A.

93022445 C 6/09